



5/5/89

B200S ASSY. UPDATES

- A.) Position heatsink to PCB at .436" from bottom of transistor to top of PCB.

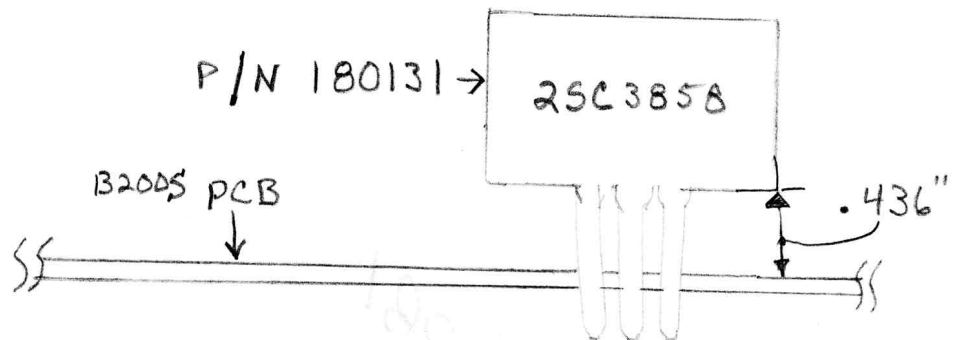

- B.) Bend 8099 transistors so that they will stay in holes in heatsink. Coat Wakefield around transistor head and inside of holes. No Wakefield on transistor leads.

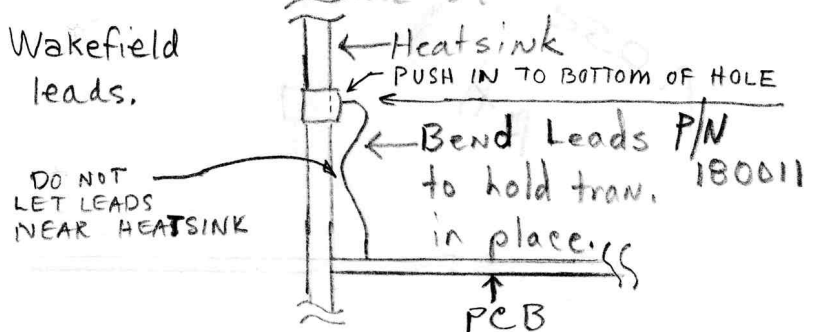

- C.) Apply Wakefield to back of heatsink around mounting screw holes before mounting assembly to chassis base. (5 places) SEE DRAWING # 540601

