


FRANK - We forgot to include this in your kit. (SEE ITEM # 5 - IMPORTANT).  
 MP-2 EPROM UPDATE INSTRUCTIONS RGDS


Dear Customer -

Enclosed, you will find the new version 1.32 EPROM for your MP-2. Integrated circuit chips are very sensitive to static electricity, so before you take the EPROM out of the package, you should discharge any static on your fingers by touching the chassis of the MP-2 while it is plugged into a 3-prong outlet. Then, follow the steps below:

- 1) Unplug the MP-2 from the outlet.
- 2) Remove the top panel only, by removing the screws around the perimeter using a small Phillips screw driver.
- 3) Remove the v1.23 EPROM (marked with a paper label) by carefully prying up with the head of a 6d size box nail (see Dwg. 1 below). Gradually rock the IC out of the socket by prying both sides of the IC with the head of the nail.
- 4) Install the v1.32 EPROM - make sure the direction mark matches up with the mark on the socket (see Dwg. 2 below). Straighten out the legs of the EPROM by pressing the side of the IC against a flat surface, and gently insert into the socket. After making sure all the legs are going into the socket holes, push the EPROM down with your thumb until it snaps into place.

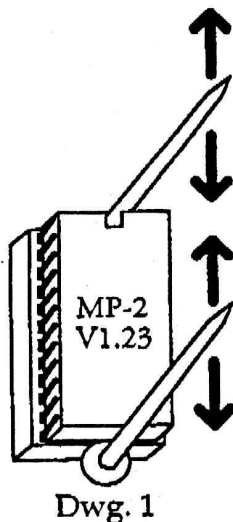

Make sure the direction markings line up.

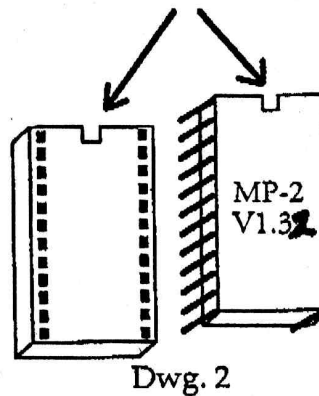

- \* 5) Do a manual "RESET SYSTEM DEFAULTS" (Hit SYS EDIT, then press the right arrow until you get to the screen "RESET SYSTEM DEFAULTS?" and press YES - up arrow). If you don't do this step, you'll get a lot of garbage screens when you go into Realtime MIDI edit.
- 6) Optional step - "COPY PRESETS TO USER" (also in the SYS EDIT menu). There have been minimal changes to the presets between v1.23 & v1.32.