



ORIGINAL

REVISION HISTORY			
REV.	DESCRIPTION	SIGNATURE	DATE
A	REV C PCB; DWG RELEASE	-	10/4/93
-	-	-	-
-	-	-	-
-	-	-	-

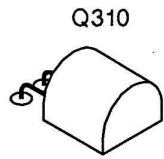

Q310


Q216




061010

NO COPPER  
THIS AREA

SHIELD BOARD  
MOUNTING  
DETAIL

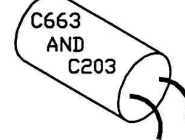


C663  
AND  
C203

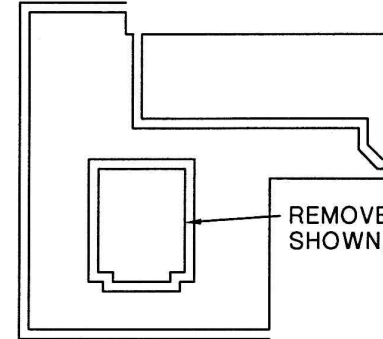

REMOVE AND MOUNT AS  
SHOWN, BEFORE SOLDERING

NOTES:

1. INSTALL Q216 WITH FERRITE BEAD (061010).
2. MOUNT C663, C203 AND Q310 OVER NEXT TO THE BOARD.
3. PREPARE VACTEC LEDS AS SHOWN BEFORE INSTALLING.
4. INSTALL SHIELD BOARD AS SHOWN BEFORE SOLDERING.

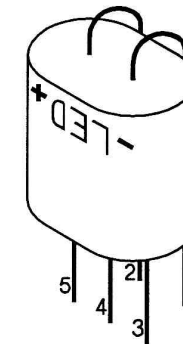

VACTEC LEAD FORMING  
DETAIL (141061x1, 141062x5)



<http://www.adadepot.com>

THIS DRAWING DOCUMENT CONTAINS INFORMATION WHICH IS PROPRIETARY TO AND THE PROPERTY OF ADA, INC. AND MAY NOT BE USED, REPRODUCED OR DISCLOSED IN ANY MANNER WITHOUT THE EXPRESSED CONSENT OF ADA, INC.

FILE NAME: A890A.DWG  
 CHECKED BY:  
 DATE:  
 APPROVED BY:  
 DATE:

**ADA SIGNAL PROCESSORS, INC.**  
 420 LESSER STREET, OAKLAND, CA 94601

TITLE MP-2 PCB ASSEMBLY, SPECIAL COMPONENTS MOUNTING DETAILS

DRAWN: D.WIRT	SIZE <b>A</b>	DRAWING NO. 890	REV A
ENGR:	© COPYRIGHT 1993	SCALE:	DATE: 10/4/93
		SHEET 1 OF 1	