


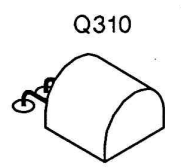


ORIGINAL

REVISION HISTORY			
REV.	DESCRIPTION	SIGNATURE	DATE
A	REV C PCB; DWG RELEASE	-	10/4//93
-	-	-	-
-	-	-	-
-	-	-	-

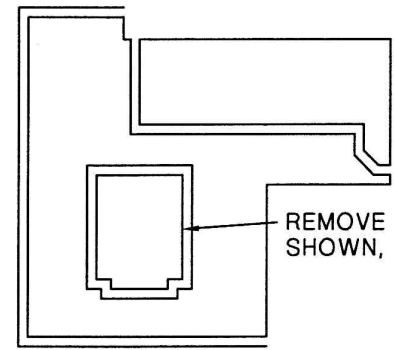

061010

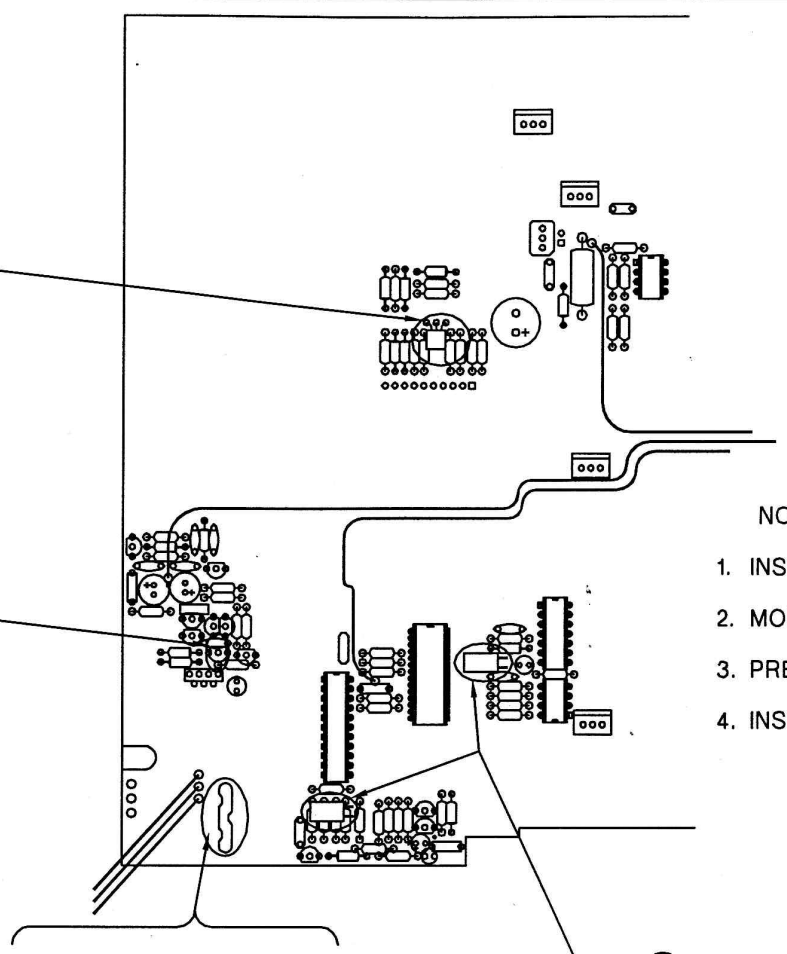


REMOVE AND MOUNT AS SHOWN, BEFORE SOLDERING



NOTES:

1. INSTALL Q216 WITH FERRITE BEAD (061010).
2. MOUNT C663, C203 AND Q310 OVER NEXT TO THE BOARD.
3. PREPARE VACTEC LEDS AS SHOWN BEFORE INSTALLING.
4. INSTALL SHIELD BOARD AS SHOWN BEFORE SOLDERING.

NO COPPER THIS AREA

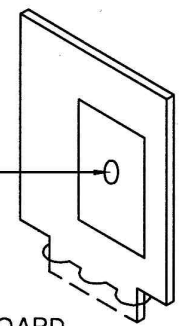

SHIELD BOARD MOUNTING DETAIL

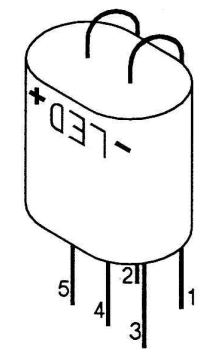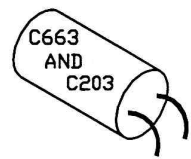

VACTEC LEAD FORMING
DETAIL (141061x1, 141062x5)

THIS DRAWING DOCUMENT CONTAINS INFORMATION WHICH IS PROPRIETARY TO AND THE PROPERTY OF ADA, INC. AND MAY NOT BE USED, REPRODUCED OR DISCLOSED IN ANY MANNER WITHOUT THE EXPRESSED CONSENT OF ADA, INC.

FILE NAME:	A890A.DWG
CHECKED BY:	
DATE:	
APPROVED BY:	
DATE:	

ADA SIGNAL PROCESSORS, INC. 420 LESSER STREET, OAKLAND, CA 94601			
TITLE MP-2 PCB ASSEMBLY, SPECIAL COMPONENTS MOUNTING DETAILS			
DRAWN: D.WIRT	SIZE A	DRAWING NO. 890	REV A
ENGR:	© COPYRIGHT 1993 SCALE:	DATE: 10/4/93	SHEET 1 OF 1



<http://www.adadepot.com>